

X-Banner Instructions



1. Carry bag with stand.



2. Remove contents from carry bag.
****Please note: The 31.5" stand has two extension poles that are included in the carry bag (not pictured).****



3. Extend the silver base legs into a tripod layout. Adjust hooks at the bottom to face outward as needed. Base legs are tension based and once extended need to be placed on ground to remain open.



4. Insert the two top poles into the stand with the hook side of the pole on top.
****Please note: For the 31.5" stand, the extensions poles need to be attached to top poles first and then inserted into holes on the base.****



4. Assembly of stand is complete and ready for the graphic.



6. Hook the grommets in graphic to the top and bottom poles.

