How to Set Up Your Tent

Applies to standard sized Hex Tube and Square Tube Advertising Tent



1 Two people stand opposite to each other and gently pull the frame until it is half open.



2 Put on the canopy to the frame by placing the top and four corners to the corresponding position.




Tie canopy corners and frame corners down with the Velcro.



3 Two people stand diagonal to each other. Lift and separate the frame legs to extent the tent out completely. Push the auto slider until the thumb lock clicks into place.



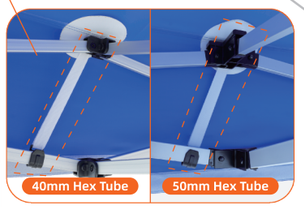

Fasten the canopy to the frame with the hook.



When the thumb–lock is locked into place, the red button will emit a "click" sound.


4 For height adjustment, stand on the foot of frame leg and slide the frame up until it locks into your desired position.



When the thumb–lock is locked into place, the red button will emit a "click" sound.

How to Set Up Your Half Wall

Applies to standard sized Hex Tube and Square Tube Advertising Tent

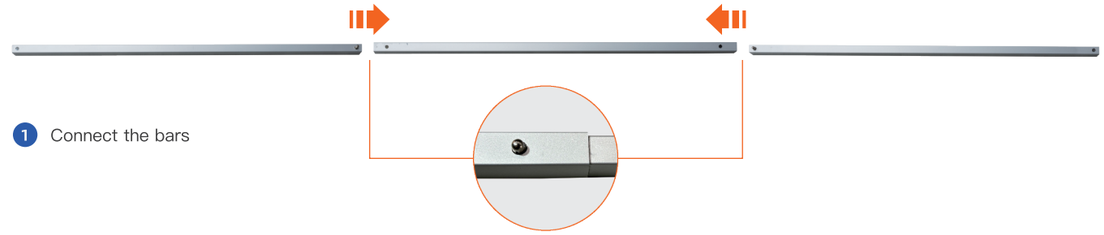


1 Connect the bars



2 Insert the bar to the half wall pocket


3 Secure the half wall to the tent legs



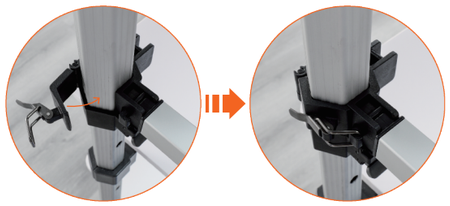

Secure the half wall to the tent legs with clamps

Fasten the graphic to the frame by Velcros straps

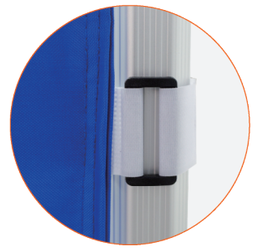

Easy Set Up

Full–Color Printing

High Quality

How to Set Up Your Full Wall

Applies to standard sized Hex Tube and Square Tube Advertising Tent



1 Attach the wall to your canopy with Velcro first.

2 Then fasten the wall to the tent legs with Velcro.

IMPORTANT NOTICE

- Always stake or weigh down your tent.
- Do not use, set up or leave your tent in any potentially harsh weather conditions: strong winds, rain, hail, sleet, snow, drizzle, or lightning.
- Our tents are designed as temporary shelter only.
- Be cautious while handling. Avoid pinching hands or fingers as frame opens or closes.
- Do not leave your tent unattended.
- Keep all flame and heat sources away from fabric top and walls.
- Do not allow water of any kind to accumulate on the tent.
- Make sure your tent is completely dry before storing.
- Keep your tent off of steep slopes and inclines.
- Do not use strong detergents to clean your canopy.
- Only mild detergent with warm water.
- Never wash the tent top & walls in a washing machine.
- Do not ship your tent with the top on the frame. Doing so could cause tears in the fabric.

Easy Set Up

Full–Color Printing

High Quality